


AC-VT02

Anleitung zur Inbetriebnahme

Das System dient zur sicheren Übertragung von AV-Signalen. Es dient als Ersatz für eine AV-Kabelverbindung dienen. Die Daten werden digital Verschlüsselt übertragen und sind nicht störungsanfällig.

Sollte die Einbausituation es erforderlich machen, können optional externe Antennen eingesetzt werden.

Der Sender (TX) wird mit der Kamera verbunden, entweder per Schraub-Systemstecker oder bei Fremdkamera mittels Cinch-Adapter (optional erhältlich). Verbinden Sie das rote Kabel des Senders mit dem Zündungs-Plus vom Fahrzeug und das schwarze Kabel mit Fahrzeugmasse.

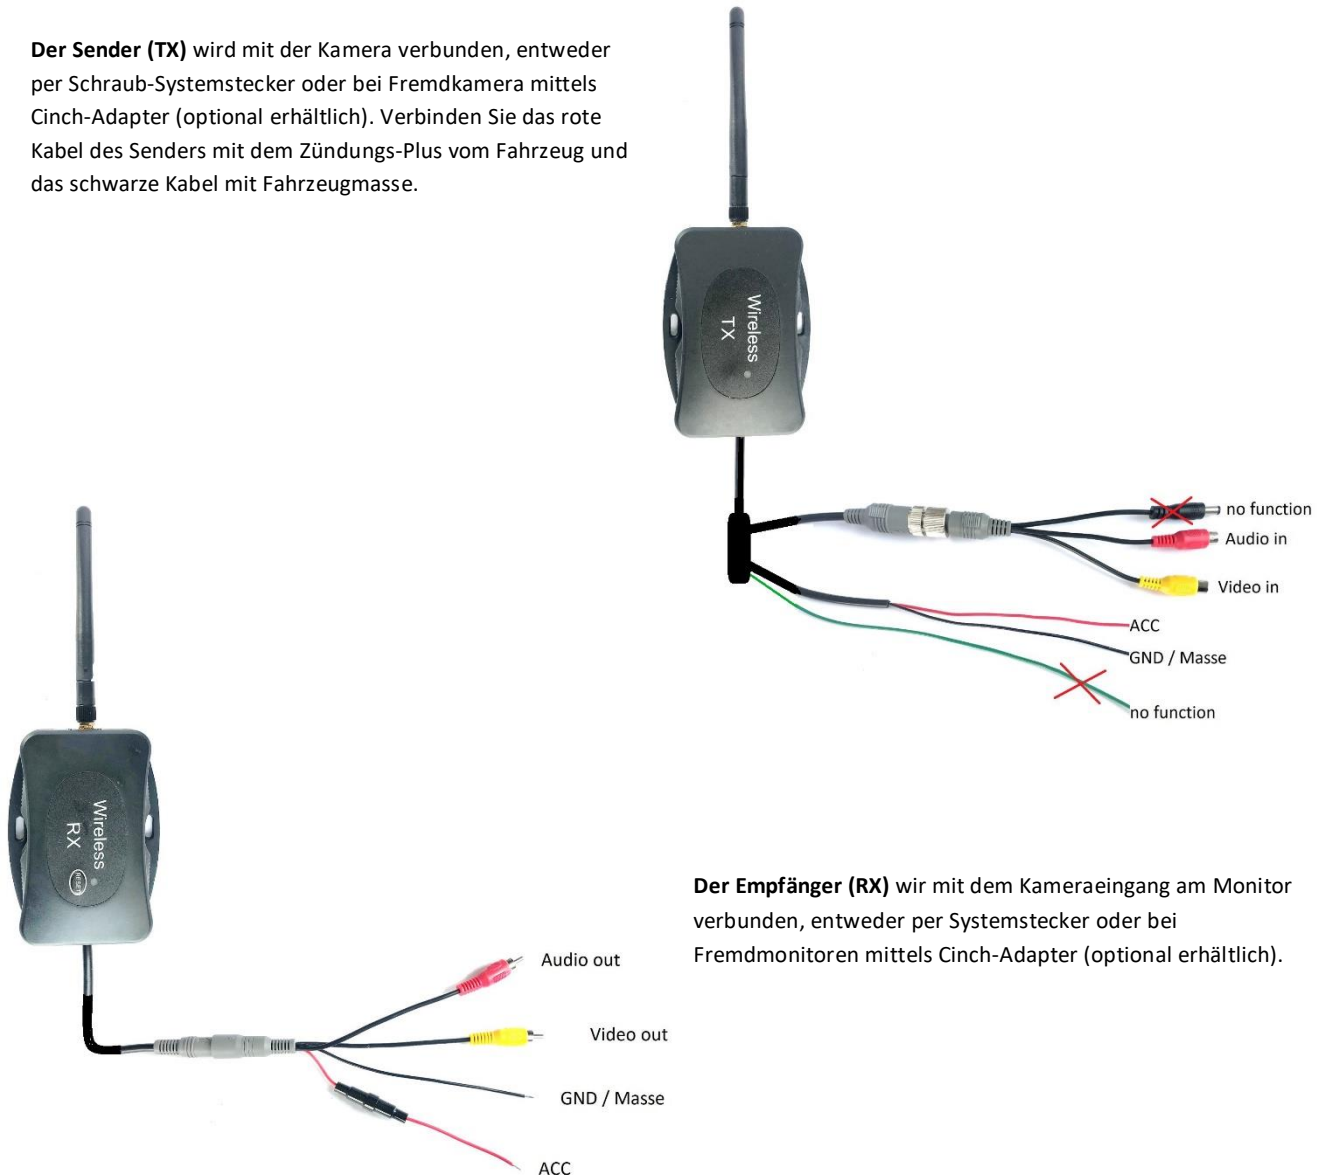

Der Empfänger (RX) wird mit dem Kameraeingang am Monitor verbunden, entweder per Systemstecker oder bei Fremdmonitoren mittels Cinch-Adapter (optional erhältlich).

Koppeln von Sender und Empfänger:

Drücken Sie die Reset-Taste des Empfängers (Rx) für ein paar Sekunden. Auf dem Monitor wird „Please press Pair on Tx Side“ angezeigt. Bitte ignorieren Sie diese Anweisung. Das Gerät koppelt sich automatisch sofern der Sender (Tx) mit der Spannungsversorgung verbunden ist. Nachdem sich Sender und Empfänger verbunden haben, erscheint auf dem Monitorbildschirm das Kamerabild.

Anschluss	12/24V
Frequenz	2,4GHZ
Signal	digital
Schutzart	IP 65
CE, E, ROHs	

AC-VT02


Manual

Commissioning instructions

The system is used for the secure transmission of AV signals. It serves as a replacement for an AV cable connection. The data are transmitted digitally encrypted and are not susceptible to interference.

If the installation situation makes it necessary, external aerials can be used as an option.

The transmitter (TX) is connected to the camera, either with a screw-type system connector or, in the case of a RCA camera, with a RCA adapter. Connect the red cable of the transmitter to the vehicle's ignition plus and the black cable to vehicle ground.

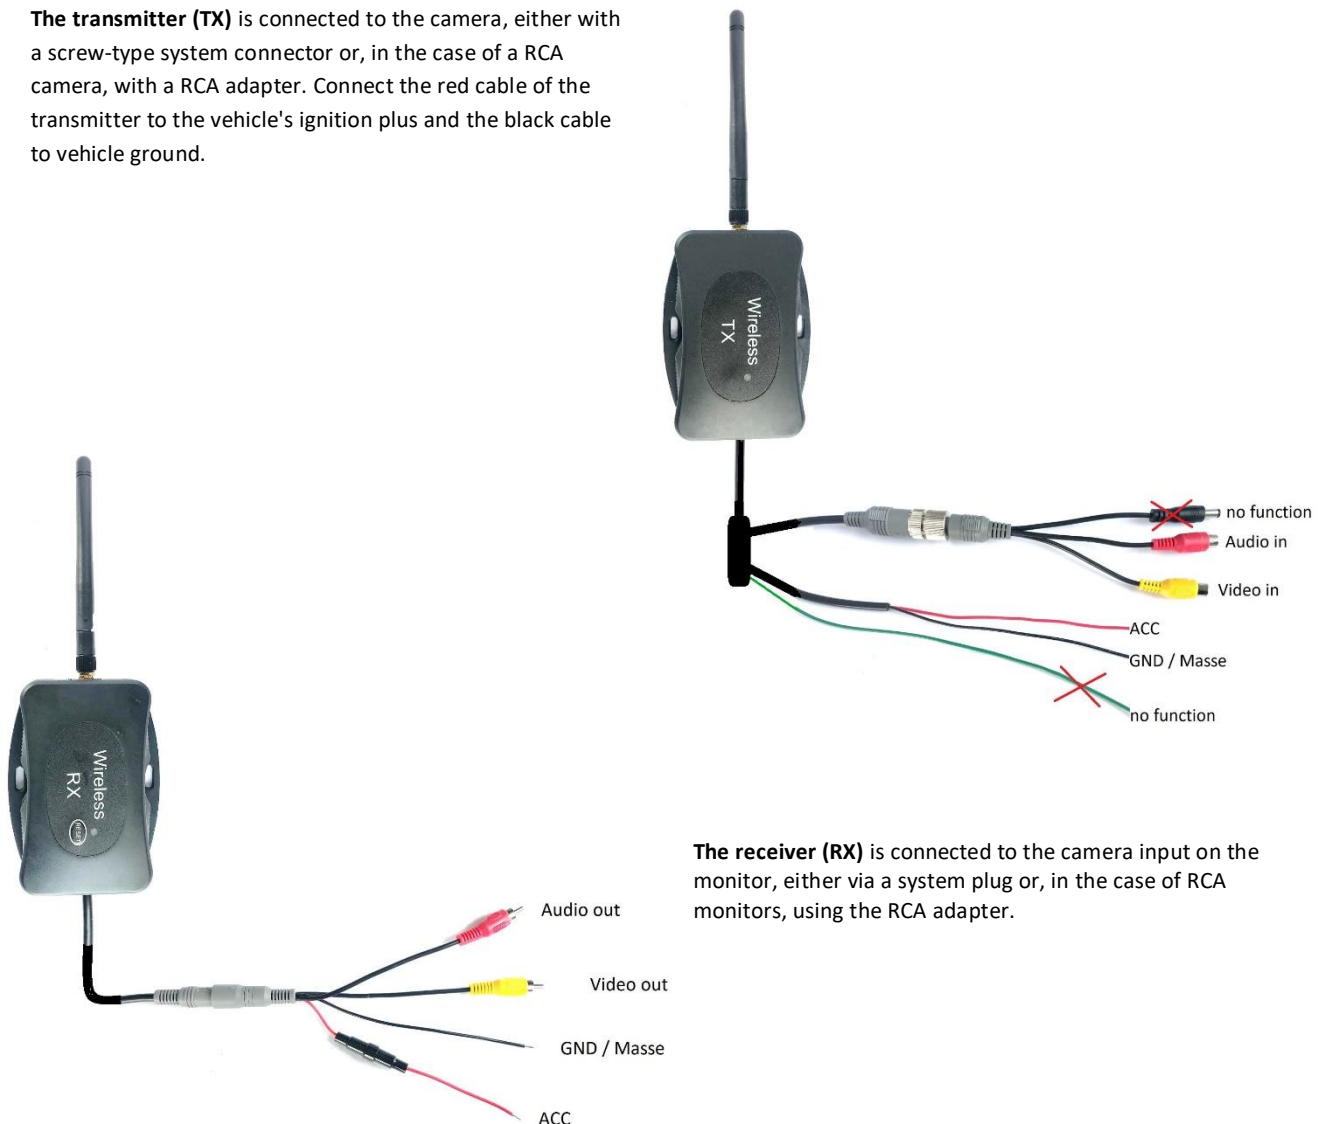

The receiver (RX) is connected to the camera input on the monitor, either via a system plug or, in the case of RCA monitors, using the RCA adapter.

Pairing transmitter and receiver:

Press the reset button on the receiver (Rx) for a few seconds. "Please press Pair on Tx side" is displayed on the monitor.

Please ignore this instruction. The device will pair automatically if the transmitter (Tx) is connected to the power supply. After the transmitter and receiver have connected, the camera image appears on the monitor screen.

Connection	12/24V
Frequency	2,4GHZ
Signal	digital
Protection class	IP 65
CE, E, ROHs	