
Parts List

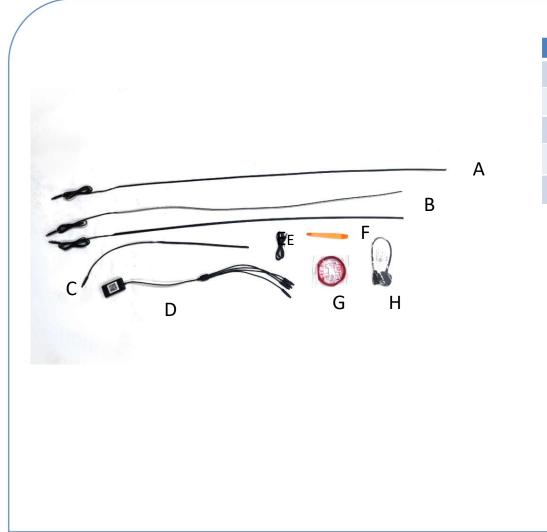



А	Instrument light bar*1	В	Central control saddle light bar*2
С	Under-screen light bar*1	D	One-to-four control box*1
Е	One to four power cord*1	F	Seesaw*1
G	Double-sided tape*1	Н	Sensing module*1

Note: Please ensure that the screen is powered off to prevent fault reporting.

Tip : For faster installation, be sure to read these instructions carefully.

Disclaimer and Notes

Warnings and Disclaimers

Important notice: You are welcome to purchase our company's products. In order to protect the legitimate rights and interests of users, we hereby remind users that you must carefully read and fully understand the terms of this statement before using this product. If you use this product, your use will be deemed to be an acknowledgment of the entire content of this statement, and you agree to be bound by the following terms of this statement, and at the same time bear the consequences caused by irregular use. Hansshow Company reserves the right to update the above documents. Please be sure to operate this product according to the instructions.

Precautions for use

1. Before installation, check whether the product list is complete and damaged.

2. The installation instructions may be slightly different from the actual operation. If there is any difference, please contact us according to the actual situation.

3. Warning: Please do not disassemble any parts by yourself. Any improper operation is not covered by the warranty.

4. Before installing the product, watch the installation video and instructions.

5. Check whether the installed product functions normally.


After-sales contact: Telephone: 19499927013 Message and whatsApp: 19499927017 Email:inquiry@hansshow.com

Installation Manual

Hansshow®



1.Remove the triangular trim panels on both sides of the instrument.

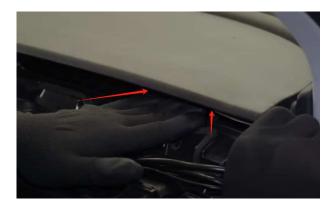

3.Insert the A instrument light bar into the gap above the air outlet.



2.Remove the instrument panel.



Insert the light bar under the C screen into the gap as shown in the picture.




5.Plug the sensor module into the 1to 4 USB port.



7. Plug the 1 to 4 USB into the USB port of the glove box.



6.Plug the sensor module into the 1 to 4 USB port.

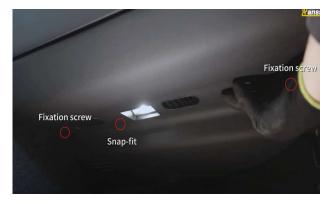

8. Removing the additional footwell trim.



9.Stick the double-sided tape on 1 the center control light strip.



11. Pry open the saddle trim panels on both sides.



10. Apply double-sided tape.



12.Remove the wireless charging panel and unplug it.



13.Stick the light bar on both sides of the silver trim of the saddle, trying to make it flush with the silver trim.(The light bar is toward the front of the car)



17.Insert the main driver's ambient light cable into the gap as shown in the figure and extend it to the passenger's footwell.



16.Reinstall the wireless charger and plug in the wireless charger.



18.Plug the ambient light cable into the one-to-four controller, then wrap the wiring harness and place it on the footwell trim, and finally put the sensor module in with the shiny side facing up.



19.After placing the wires, install the footwell trim.



Warranty and Support

Hansshow provides 1 - year extended warranty service. Send us your customer number to get 1 - year full warranty.

Email: inquiry@hansshow.com



www.hautopart.com

Designed by HANSSHOW